

Upgrade Guidance for HD Cameras

This firmware is for HD cameras D4Z/VZ4, SD4, MDS4030, MDS4010. Please check your camera model on the bottom sticker. Updating with the wrong firmware could severely damage and/or break your camera. Please make sure the firmware is correct.

Note:

System firmware System firmware 1.16.1.2, App firmware 2.x.2.16, 2.x.2.19, 2.x.2.21, 2.x.2.23, 2.x.2.24, 2.x.2.25, 2.x.2.27, 2.x.2.29, 2.x.2.30, 2.x.2.33, 2.x.2.34, 2.x.2.35, 2.x.2.38, 2.x.2.39, 2.x.2.41, 2.x.2.42, 2.x.2.44 can upgrade to this version.

Please do not power off the camera during upgrade. Otherwise, the camera may be broken.

Step 1: Login your camera on Foscam VMS, go to **Settings-->System-->System Upgrade**. Click Browse/Choose File, find the file [FosIPC_M_sys_ver1.16.1.3_4.0MP.bin](#) you've extracted in your local hard driver, then click **Open**. Camera will upgrade after you click on **System Upgrade**.

Step 2: Login again to check the **System Firmware Version, Application Firmware Version**.

Congratulations, your camera successfully upgraded to the latest firmware!

End

--- By Foscam Technical Support Team